

DMC OPERATION MANUAL

Please go through the following procedures (a to i) step by step carefully and make sure every step is completely set up before using **AUTO TILT** function. Please keep **ACC ON** during setting procedures.

START

- Ⓐ Press and Hold Mirror Switch to Tilt up mirror at passenger side to the **UTMOST**.
(**CLICK** sound will heard)



The following 3 steps in frame must be continuously followed.

- Ⓑ Press **LOCK** on Door Lock Switch **ONCE**.



- Ⓒ Put Gear to **REVERSE (R)** position.



- Ⓓ Press **LOCK** on Door Lock Switch **ONCE**.



※Mirror will **TILT Up & Down** for 1-5 times (Depend on Car Model), then stop.

- Ⓔ Set the Angle of Passenger Side Mirror for normal driving.



- Ⓕ Press **LOCK** on Door Lock Switch **ONCE**.
Mirror will **TILT Up & Down** for 1-5 times (Depend on Car Model), then stop.



- Ⓖ Set the angle of Passenger Side Mirror when engage **REVERSE (R)** Gear.



- Ⓖ Press **LOCK** on Door Lock Switch **ONCE**.
Mirror will **TILT Up & Down** for 1-5 times (Depend on Car Model), then remain at the angle set for **REVERSE (R)** position.



- Ⓘ Shift Gear away from **REVERSE (R)** position, Mirror will **RETURN** to the angle set for Normal Driving.



- Ⓛ After i completed, mirror auto back to driving view.

FINISHED

Note: Whenever you do **REVERSE** Parking and **TURN OFF** the car engine, the Side Mirror will **TILT UP & Down ONCE** before coming to a **STOP**.

Additional Functions for AUTO TILT

1) Temporary Release of Side Mirror AUTO TILT Function for Car Reversing

- a) To de-activate AUTO TILT when car Engage in REVERSE(R) Gear Temporary
 - > SHIFT Gear to **REVERSE(R)** position
 - > PRESS **LOCK** (From door lock switch) **ONE(1)** time, the AUTO TILT function will be released for this time
 - > Side Mirror will Tilt DOWN & RETURN back to Normal Driving angle
- b) To activate back the AUTO TILT function
 - > PRESS **LOCK** (From door lock switch) **ONE(1)** more time
 - > Side Mirror will Tilt back to **REVERSE(R)** angle

2) Permanent Release of Side Mirror AUTO TILT Function for Car Reversing

- a) To de-activate PERMANENTLY when Engage in REVERSE(R) Gear Permanently
 - > SHIFT Gear to **ANY** Gear Position **BUT NOT REVERSE(R)** position
 - > PRESS **LOCK** (From door lock switch) **FIVE(5)** times
- b) To activate back the AUTO TILT function
 - > PRESS **LOCK** (From door lock switch) **FIVE(5)** times

3) Memory Function

The viewing angle of Side Mirror AUTO TILT can be set up for different driver's needs.

- a) Different driver will just need to set the NEW Normal Driving angle for Side Mirror.
- b) PRESS **LOCK** (from door lock switch) **THREE(3)** times continuously.
 - > New Normal Driving angle will be memorized for the New Driver.

Note: During the setting of the Normal Driving angle, Gear MUST not be on REVERSE(R) position.

Function2: Door Mirror Auto Fold

- > The Side Mirrors will AUTO FOLD when all the Car Doors are Locked or Activate your Car Alarm.
- > When you Unlock your Car Doors or De-activate your Car Alarm and Turn on the Ignition, the Side Mirrors will AUTO OPEN or UNFOLD provided you put the Side Mirror Control Switch on the "OPEN" position permanently.

1) Once the car engine is OFF (ACC OFF), the Side Mirrors will AUTO FOLD through the following 3 controls:

- a) Central lock the car doors through the Remote Control
- b) Central lock the car doors by Car Key
- c) Central lock the car doors by Pressing the LOCK from door lock switch

2) For Side Mirrors to AUTO OPEN when car engine is ON (ACC ON)

- a) Please put Side Mirrors FOLDING Switch to "**OPEN**" position ALL the time